 
 




Instructions

Compatible with the wacom **Pro Pens** and **Grip Pens**.



1. Gently remove the button.



  
2. **For the Pro Pen only!** Gently remove the silver trim.





3. Unscrew the tip. Remove the tip and the washer.

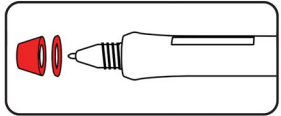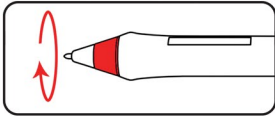



4. Gently remove the grip. Slide straight out and do not twist.

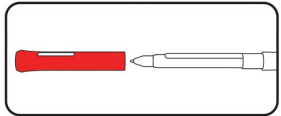



5. Align the top of the new ergo grip to the top of the pen.
Gently slide the ergo grip straight onto the pen. Do not twist.

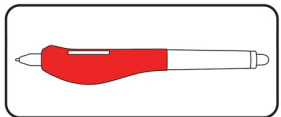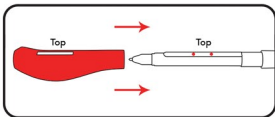

6. **Without the washer!** Screw the tip back on the pen.
Do not over tighten. The washer is not used with the ergo grip.

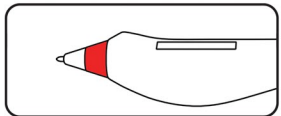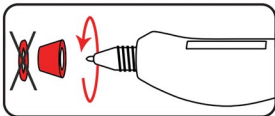

7. Insert the button back on the pen.

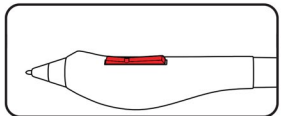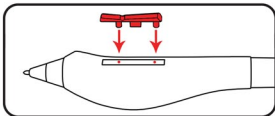

For instructional videos and FAQs please visit our website:

www.plusergogrips.com